

The Voltaic Generator includes all of the following standard device adapters:



S (2.3x0.7mm):

AudioVox: CDM8400, 8410, 8450, 8610, 8900, 8910, 8915, 8920, 8930, 8940, 9900, 9950

Canon: A100, A200, A300, A310, A400, A410, A430, A510, A520, A530

Danger: Sidekick, Sidekick II, Sidekick III, Sidekick ID

Kodak: C330, C340, C360, C503, C533, C603, C643, C663, CD33, CD43, CW330, CX4200, CX4210, CX4230, CX4300, CX4310, CX6200, CX6230, CX6330, CX6445, CX7220, CX7330, CX7430, CX7525, CX7530, DX4330, DX4530, DX6340, DX6440, Z612, Z650, Z700, Z740

Palm: Tungsten E, Zire, Zire 21, Zire 31, Zire 72

Samsung: SPHA460, SPHA500, A600, SPHA600, A620, SPHA620, A660, SPHA660, A666, A680, SPHA680, A700, SPHA700, SPHA740, SPHA760, A800, SPHA800, A820, SPHA820, A840, SPHA840, A880, SPH880, A920, SPHA920, A940, SPHA940, N240, SPHN240, SPHN400, VGA1000, VMA680

Sanyo: 5500, RL2000, RL2500, RL4920, SCP7300, SCP8100, SCP8200, VGA1000, VM4500



A (3.5x1.3mm):

Navman: ICN 610, 630, 635, 650



C (4.0x1.7mm):

Sony: PSP

Kodak: DC4800, DX6490, DX7440, DX7590, LS443, LS633, LS743, LS753, P850, P880, V530, V550, V570, V603, Z730, Z7590, Z760



E (5.5x2.1mm):

Altec Lansing: inMotion speakers



B (5.5 x 2.5mm)



N (5.0 x 1.0mm with center pin)



J (4.7 x 1.7mm)



K (5.5 x 1.7mm)



H (6.0 x 1.4mm with center pin)




D (6.0 x 3.3mm)



I (7.3 x 0.6mm with center pin)



M (7.9 x 0.9mm with center pin)

Note: The universal adaptor plugs are standard sizes designed to fit many different devices. The polarity of these adaptors is center positive as indicated by the following symbol: . This is how almost all consumer electronics are made, but you should double check before charging by looking for this symbol on the device. If the device indicates center negative do not use these adaptors.

Standard Cell Phone Adaptors



Apple iPod/iTouch/Phone Adaptor:

iPhone (excluding some 3G iPhones), Nano, Mini, Video, Color, Click Wheel and Dock Connector (use the 6.5 - 8.4V setting)

Note: Some 3G iPhones require a USB socket which we can include with your order. Please indicate in the note section of your order if you require this.



LG Chocolate:

LG Chocolate, LG Chocolate Cherry, LG Chocolate Mint, LG Chocolate Pink, LG Chocolate White, EnV, AX275, AX380, AX8600, Chocolate EnV, LX150, VX8600, VX8700, VX9400, VX9900



Mini USB Adaptor:

BlackBerry: 6200, 6210, 6220, 6230, 6280, 6500, 6510, 6700, 6710, 6720, 6750, 7100, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7200, 7210, 7230, 7250, 7290, 7500, 7510, 7520, 7700, 7730, 7750, 7780, 8100, 8300, 8310, 8700, 8700c, 8700g, 8700r, 8703e, 8800, 8820, 8830

Creative: MuVo Slim, Xmod, Zen Micro, Zen Micro Photo, Zen Neon 512MB, Zen Neon 5GB, Zen Neon 2, Zen Sleek, Zen Sleek Photo, Zen Stone, Zen V, Zen V Plus

Garmin: Astro, Astro 220, Edge 205, Edge 305, Edge 605, Edge 705, eTrex Legend C, eTrex Legend Cx, eTrex Legend HCx, eTrex Summit HC, eTrex Venture Cx, eTrex Venture HC, eTrex Vista C, eTrex CX, eTrex Vista CX, eTrex Vista HCx, Forerunner, 205, Forerunner 301, GPS 10x Receiver, Mobile 10 for laptops, Mobile for Blackberry with GPS 10x, Nuvi 200, Nuvi 200w, Nuvi 250, Nuvi 250w, Nuvi 260, Nuvi 270, Nuvi 300, Nuvi 310, Nuvi 350, Nuvi 360, Nuvi 370, Nuvi 650, Nuvi 660, Nuvi 670, Nuvi 680, Nuvi 750, nuvi 760, Nuvi 770, Rino 530, StreetPilot i2, StreetPiloti3, SteetPilot i5

Motorola: RAZR V3, A70, A780, A910, A1200, E770, E770V, E1070, K3, KRZR K1, KRZR K1m, KRZR K3, L2, L6, L7, PEBL, PEBL U6, RAZR V3, RAZR V3xx, RAZR V3xx iMode, RAZR Maxx V6, RAZR2 V8, RIZR Z3, RIZR Z6, RIZR Z8, SLVR, SLVR L7, V3i, V3x, V360, W375, W510

Orange: O2 Atom, O2 XDA Exec, O2 XDA Life, O2 XDA II Mini

Palm: Z22...



Nokia N73: 1650, 2630, 2760, 3109 Classic, 3110 Classic, 3250, 3500, 5070, 5200, 5300 XpressMusic, 5310, 5500 Sport, 5610, 5700 Xpress Music, 6070, 6080, 6085, 6086, 6101, 6103, 6110 Navigator, 6111, 6120, 6121, 6125, 6131, 6136, 6151, 6233, 6234, 6267, 6270, 6280, 6300, 6301, 6500, 6555, 6600 Fold, 7360, 7370, 7390, 7500, E50, E51, E61, E61i, E65, E90, N70, N71, N72, N73, N76, N77, N78, N80, N81, N90, N91, N92, N93, N93i, N95, N800, N810

(N.B.- Due to Cingular's adaptor design, our Nokia adaptor does not work with US Cingular phones- unfortunately a Cingular manufactured car charger or the optional Nokia car charger can be purchased from www.voltaicsystems.com)



Samsung Instinct: DM-S105, SCH-R200, SCH-R210 Spex, SCH-R300 SCH-R410, SCH-R430 My Shot, SCH-R500 Hue, SCH-R610, SCH-U470 Juke, SCH-U700 Gleam, SCH-U706 Muse, SCH-U900 Flip Shot, SCH-U940 Glyde, SGH-A117, SGH-A127, SGH-A226, SGH-A227, SGH-A517, SGH-A737, SGH-A747, SGH-A827 Samsung Access, SGH-C180, SGH-F110, SGH-F200, SGH-F210, SGH-F250, SGH-F490, SGH-F700, SGH-G600, SGH-G800, SGH-I450, SGH-I617 blackjack II, SGH-i640, SGH-J700, SGH-L170, SGH-L600, SGH-L760, SGH-M110, SGH-T229, SGH-T339, SGH-T409, SGH-T429, SGH-T439, SGH-T539 Beat, SGH-T729 Blast, SGH-T739 Katalyst, SGH-T819, SGH-U900, SPH-1325 Mysto Helio, SPH-A513, SPH-A523 Fin, SPH-I325 Mysto ACE, SPH-M300, SPH-M305, SPH-M310, SPH-M510 Slash, SPH-M520, SPH-M800 Instinct, SPH-Z400



Sony Ericsson J100: D750i, J100a, J100c, J100i, J220a, J220c, J220i, J230c, J230i, K310a, K310c, K310i, K320i, K510a, K510c, K510i, K610i, K610im, K618i, K750c, K750i, K758c, K790a, K790c, K790i, K800i, M600i, M608c, P990i, V630i, W300c, W300i, W550c, W550i, W600, W600c, W600i, W700c, W700i, W710i, W710c, W800, W800c, W810c, W810i, W830i, W830c, W850i, W900c, W900i, W950i, W958c, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z610i, Z710c, Z710i

Chargers



AC Travel Charger: This charger can be used to recharge the battery pack from an AC power source (110V or 240V). Output: DC 18V, 500mA.



Car Charger Socket: For standard car chargers
(For highest efficiency, try the 6.5-8.4V setting first. If this does not work, use the 12-20V setting)