

The Voltaic Backpack, Converter and Messenger include all of the following standard device adapters:



**Car Charger Socket:** For standard car chargers  
(Typically work at the 7.2V setting on the battery, or connect direct to solar panels at 10V)



**USB Adaptor:** Plug in a standard USB charger (use 5V setting).  
**iPod:** Phone, iPhone 3G, Nano, Mini, Shuffle, Video, Color, Click Wheel and Dock Connector (via USB charger)



**Universal Adaptor Plugs:**

**S (2.3x0.7mm):**

**AudioVox:** CDM8400, 8410, 8450, 8610, 8900, 8910, 8915, 8920, 8930, 8940, 9900, 9950

**Canon:** A100, A200, A300, A310, A400, A410, A430, A510, A520, A530

**Danger:** Sidekick, Sidekick II, Sidekick III, Sidekick ID

**Kodak:** C330, C340, C360, C503, C533, C603, C643, C663, CD33, CD43, CW330, CX4200, CX4210, CX4230, CX4300, CX4310, CX6200, CX6230, CX6330, CX6445, CX7220, CX7330, CX7430, CX7525, CX7530, DX4330, DX4530, DX6340, DX6440, Z612, Z650, Z700, Z740

**Palm:** Tungsten E, Zire, Zire 21, Zire 31, Zire 72

**Samsung:** SPHA460, SPHA500, A600, SPHA600, A620, SPHA620, A660, SPHA660, A666, A680, SPHA680, A700, SPHA700, SPHA740, SPHA760, A800, SPHA800, A820, SPHA820, A840, SPHA840, A880, SPH880, A920, SPHA920, A940, SPHA940, N240, SPHN240, SPHN400, VGA1000, VMA680

**Sanyo:** 5500, RL2000, RL2500, RL4920, SCP7300, SCP8100, SCP8200, VGA1000, VM4500


**H (3.5x1.3mm):**

**Navman:** ICN 610, 630, 635, 650 I (4.0x1.7mm):

**Sony:** PSP

**Kodak:** DC4800, DX6490, DX7440, DX7590, LS443, LS633, LS743, LS753, P850, P880, V530, V550, V570, V603, Z730, Z7590, Z760

**E (5.5x2.1mm):**

**Altec Lansing:** inMotion speakers **Note:** The universal adaptor plugs are standard sizes designed to fit many different devices. The polarity of these adaptors is center positive as indicated by the following symbol: . This is how almost all consumer electronics are made, but you should double check before charging by looking for this symbol on the device. If the device indicates center negative do not use these adaptors. **Standard Cell Phone**

**Standard Cell Phone Adaptors:**



**LG Chocolate:** LG Chocolate, LG Chocolate Cherry, LG Chocolate Mint, LG Chocolate Pink, LG Chocolate White, EnV, AX275, AX380, AX8600, Chocolate EnV, LX150, VX8600, VX8700, VX9400, VX9900



**Mini USB Adaptor:**

**BlackBerry:** 6200, 6210, 6220, 6230, 6280, 6500, 6510, 6700, 6710, 6720, 6750, 7100, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7200, 7210, 7230, 7250, 7290, 7500, 7510, 7520, 7700, 7730, 7750, 7780, 8100, 8300, 8310, 8700, 8700c, 8700g, 8700r, 8703e, 8800, 8820, 8830

**Creative:** MuVo Slim, Xmod, Zen Micro, Zen Micro Photo, Zen Neon 512MB, Zen Neon 5GB, Zen Neon 2, Zen Sleek, Zen Sleek Photo, Zen Stone, Zen V, Zen V Plus

**Garmin:** Astro, Astro 220, Edge 205, Edge 305, Edge 605, Edge 705, eTrex Legend C, eTrex Legend Cx, eTrex Legend Hc, eTrex Summit HC, eTrex Venture Cx, eTrex Venture HC, eTrex Vista C, eTrex CX, eTrex Vista CX, eTrex Vista Hc, Forerunner, 205, Forerunner 301, GPS 10x Receiver, Mobile 10 for laptops, Mobile for Blackberry with GPS 10x, Nuvi 200, Nuvi 200w, Nuvi 250, Nuvi 250w, Nuvi 260, Nuvi 270, Nuvi 300, Nuvi 310, Nuvi 350, Nuvi 360, Nuvi 370, Nuvi 650, Nuvi 660, Nuvi 670, Nuvi 680, Nuvi 750, nuvi 760, Nuvi 770, Rino 530, StreetPilot i2, StreetPiloti3, SteetPilot i5

**Motorola:** RAZR V3, A70, A780, A910, A1200, E770, E770V, E1070, K3, KRZR K1, KRZR K1m, KRZR K3, L2, L6, L7, PEBL, PEBL U6, RAZR V3, RAZR V3xx, RAZR V3xx iMode, RAZR Maxx V6, RAZR2 V8, RIZR Z3, RIZR Z6, RIZR Z8, SLVR, SLVR L7, V3i, V3x, V360, W375, W510

**Orange:** O2 Atom, O2 XDA Exec, O2 XDA Life, O2 XDA II Mini

**Palm: Z22...**



**Nokia N73:** 1650, 2630, 2760, 3109 Classic, 3110 Classic, 3250, 3500, 5070, 5200, 5300 XpressMusic, 5310, 5500 Sport, 5610, 5700 Xpress Music, 6070, 6080, 6085, 6086, 6101, 6103, 6110 Navigator, 6111, 6120, 6121, 6125, 6131, 6136, 6151, 6233, 6234, 6267, 6270, 6280, 6300, 6301, 6500, 6555, 6600 Fold, 7360, 7370, 7390, 7500, E50, E51, E61, E61i, E65, E90, N70, N71, N72, N73, N76, N77, N78, N80, N81, N90, N91, N92, N93, N93i, N95, N800, N810



**Samsung Instinct:** DM-S105, SCH-R200, SCH-R210 Spex, SCH-R300 SCH-R410, SCH-R430 My Shot, SCH-R500 Hue, SCH-R610, SCH-U470 Juke, SCH-U700 Gleam, SCH-U706 Muse, SCH-U900 Flip Shot, SCH-U940 Glyde, SGH-A117, SGH-A127, SGH-A226, SGH-A227, SGH-A517, SGH-A737, SGH-A747, SGH-A827 Samsung Access, SGH-C180, SGH-F110, SGH-F200, SGH-F210, SGH-F250, SGH-F490, SGH-F700, SGH-G600, SGH-G800, SGH-I450, SGH-I617 blackjack II, SGH-i640, SGH-J700, SGH-L170, SGH-L600, SGH-L760, SGH-M110, SGH-T229, SGH-T339, SGH-T409, SGH-T429, SGH-T439, SGH-T539 Beat, SGH-T729 Blast, SGH-T739 Katalyst, SGH-T819, SGH-U900, SPH-1325 Mysto Helio, SPH-A513, SPH-A523 Fin, SPH-I325 Mysto ACE, SPH-M300, SPH-M305, SPH-M310, SPH-M510 Slash, SPH-M520, SPH-M800 Instinct, SPH-Z400



**Sony Ericsson J100:** D750i, J100a, J100c, J100i, J220a, J220c, J220i, J230c, J230i, K310a, K310c, K310i, K320i, K510a, K510c, K510i, K610i, K610im, K618i, K750c, K750i, K758c, K790a, K790c, K790i, K800i, M600i, M608c, P990i, V630i, W300c, W300i, W550c, W550i, W600, W600c, W600i, W700c, W700i, W710i, W710c, W800, W800c, W810c, W810i, W830i, W830c, W850i, W900c, W900i, W950i, W958c, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z610i, Z710c, Z710i

## Chargers



**AC Travel Charger:** This charger can be used to recharge the battery pack from an AC power source (110/240V 800mA).



**DC Car Charger:** This charger can be used to recharge the battery pack from a car.